## **PUSH BUTTON ACTUATORS**



## Size 30



Flush Push Button. Manual push "In". Spring return.



Extended Push Button. Manual push "In". Spring return.

Part No. Description

PL-P2F-R ...Red PL-P2F-G . . . Green PL-P2F-B ...Black PL-P2F-Y ... Yellow



Part No. Description

PL-P2E-R ...Red PL-P2E-G ... Green PL-P2E-B ...Black PL-P2E-Y ... Yellow







Key Twist 90° Maintained. (PL-T3K-B) Turn key clockwise to latch "In". Turn key counterclockwise to release. Key

with-drawable in both positions. Black only.

(PL-K3K-B) Same as PL-T3K-B except key is withdrawable in "Out" position only.

Part No. Description

PL-T3K-B ...Black PL-K3K-B ...Black



Automatic Push/Turn Mushroom. Manual push "In". Latches "In". Turn clockwise to unlatch. Spring return.



Push Key Push Button. Manual push "In". Spring

return. Turn key counterclockwise to

lock "Out"; clockwise to unlock. Key withdrawable locked or unlocked. Black only.

Description



Push Key Mushroom. Manual push "In". Automatic latches "In". Turn key clock-

wise to release. Spring return. Key with-drawable "Out" position only. Red only.

Description

Part No. Description PL-L3M-R . . . Red

PL-L3M-G . . Green PL-L3M-B . . . Black



Spring Return Twist 45°. Turn clockwise and hold for "In". Release for spring return. Black only.



PL-P4K-B ...Black

Part No.

Maintained Twist 90°. Turn clockwise to latch "In". Turn counterclockwise to release. Black only.



Part No.

PL-L4M-R . . . Red

Manual Push Mushroom. Manual push "In". Spring return.

Part No. Description

PL-T2T-B ...Black

Part No. Description PL-T3T-B .Black

Part No. Description

PL-P2M-R . . . Red PL-P2M-G . . Green PL-P2M-B . . . Black